



KBRSHOWNICHE™ INSTALLATION INSTRUCTIONS



ShowerNiche™

8406 Speedway Blvd.
Hardeeville, SC 29927
www.KBRInc.com

Customer Service: 866.912.3211
Monday - Friday: 9AM EST to 6PM EST



Place ShowerNiche™ between stud frame (*NOTE: bring ShowerNiche™ forward flush with backer board*). Attach niche(s) to stud(s) using exterior decking screws.



Apply a liberal amount of ShowerSeal® Polyurethane Sealant* to the outside of each screw head, to fill the void.



Measure and cut backer board to fit around the niche(s). Per manufacturer instructions, attach backer to studs. Apply ShowerSeal® Polyurethane Sealant* around niche(s) - tool smooth with glove and finger.




Coat the outer edges of the niche(s) with ShowerSeal® Liquid Liner*** using a paint brush or roller.



Apply ShowerSeal® Gauging Fabric** to the wet coated seams of each ShowerNiche™ & the backer board. Continue to apply ShowerSeal® Gauging Fabric** to all seams of shower and around niche(s).



Coat the outer edges of the niche(s) embedding the Fabric with ShowerSeal® Liquid Liner***. Repeat process at all seams, and/or joints.

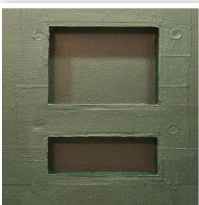

Allow ShowerSeal® Liquid Liner*** to dry, then apply a second coat. Allow time to dry, then apply thin-set and decorative surfacing.

*equivalent 100% silicone sealant or poly

**equivalent reinforcing gauging fabric

*** equivalent liquid/sheet waterproofing membrane