




No Additional
Flanges or Flash
Required



**Do Not Nail/Screw
"Free-Floating"
Perimeter Flange to Studs**

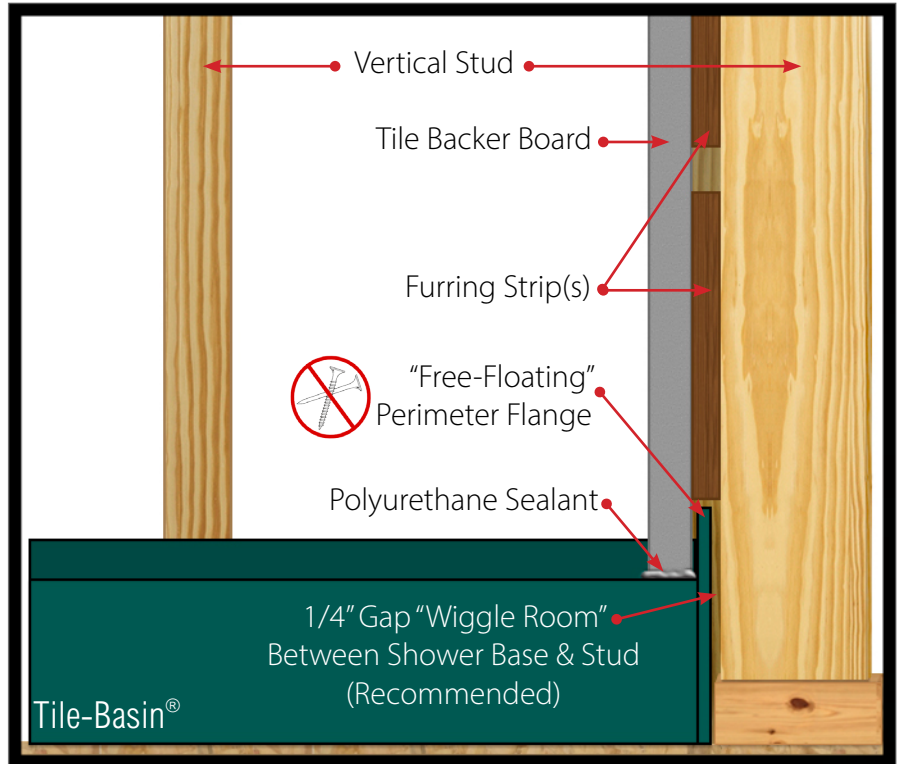

(Not to Scale)